

PRESTIGE ADJUSTABLE BED MANUAL



CONTENTS

Safety	1–2
Introduction	3
Care	4
Features	5
Unpacking Your Bed	6
Assembling Your Bed	7
Hand Control Overview	8–10
Troubleshooting	11
Product Guarantee	12

ATTENTION: Important Safety Disclaimers
Read all instructions before using
your adjustable bed. Save these instructions.

WARNING

To reduce the risk of injury or electric shock, always unplug the bed from the electrical outlet before servicing or cleaning. Ensure the bed is in the flat position and all motors are off before disconnecting.

TO REDUCE THE RISK OF SHOCK, FIRE OR INJURY:

- Only use this bed for its intended purpose as described in this manual.
- For optimal safety and operation, plug the bed base into a surge protector (not included).
- Keep the power cord away from water and heated surfaces.
- Immediately stop using the bed and contact a qualified service centre or technician if there is any damage to the power cord, plug, and/or associated cables.
- Do not use accessories or attachments that are not recommended by the manufacturer, as the use of unauthorised equipment may result in electrical shock, electrical fault, or fire.

PETS AND CHILDREN: To reduce the risk of injury to pets or children, keep the area under the bed clear of obstacles and always supervise operation when used by someone unfamiliar with this manual.

- To reduce the risk of falls on height adjustable beds, the bed should always be in its lowest position for sleeping and resting. The highest position should only be used for carer's access to the user, ease of entry and exit of bed for the user and ease of making the bed.
- A minimum of 2 able and fit adults should be present when lifting or moving the bed. It is recommended to use trolleys or other lifting/moving devices where possible.
- Careless use of naked flames, cigarettes or other heat sources could set fire to this product.
- Do not operate whilst any person is under the bed whilst raising/lowering or adjusting the bed.
- Care should be taken that no body parts are in or near the adjustable frame while operating.
- Ensure the cabling of the bed is free from the mechanism.
- Don't run over electrical cables when moving the bed.
- Do not manipulate or conduct electrical maintenance on the motors or any of the beds electrical components or cables.
- Any electrical work must be facilitated by a qualified tradesperson.

WARNING

- Stay clear of moving parts while in motion.
- Before adjusting, make sure children and pets are clear of moving parts and are not under the bed.
- Do not allow children to operate bed without adult supervision.

**Congratulations on the purchase of your new
Prestige Adjustable Bed!**



Our Prestige range is the benchmark for high quality adjustable beds. Hi-tech, modern features are packed in to a sleek, luxuriously designed package that won't look out of place in any bedroom.

For the latest version of the product manual - scan the QR code below:



General Care Instructions

- Legs should be checked for tightness regularly.
- When transporting - do not over tighten when restraining.
- Do not exceed the maximum weight limit for this bed (300kg total).
- Do not jump on or abuse the bed.
- Do not constantly push the buttons on the hand control when not for intended use.
- Use the hand control only for adjusting the bed frame for intended use - not for entertainment.
- Lubricate moving parts using a non-corrosive lubricant every 6 months or as required.
- Beds should be positioned with clearance from walls and other objects so as not to cause damage.
- Do not rock or tilt the frame.
- The massage feature should be operated at a 50% duty cycle, with a maximum of 30 minutes on and 30 minutes off each hour.

Product Features

- Stylish modern living design
- Adjustable head and foot parts
- Wireless hand control

Frame Design Features

- Whisper quiet, low voltage, DC lift system provides smooth and efficient operation.
- Powder coated steel structure
- 300kg weight rated
- Gravity fall motors
- Can suit any adjustable bed mattress.



ADJUSTABLE
BED

UNPACKING YOUR BED

6


1. Open the carton box and remove the protective plastic.
2. Locate box of parts, remove zip ties. Locate retainer bars, hand control, corner guards and legs.



ASSEMBLING YOUR BED


7

1. Turn your Prestige on its side.
2. Locate the box containing legs, screw the 4 corner legs in as shown with the included leg bolts.
3. Turn the bed back to a flat position, with legs now attached.
4. Locate the mattress bars; attach each mattress bar to the head and foot as shown below.

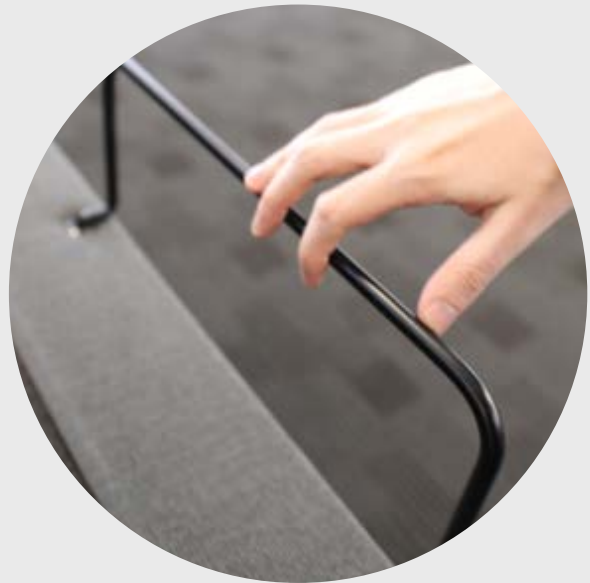

HAND CONTROL OVERVIEW

8

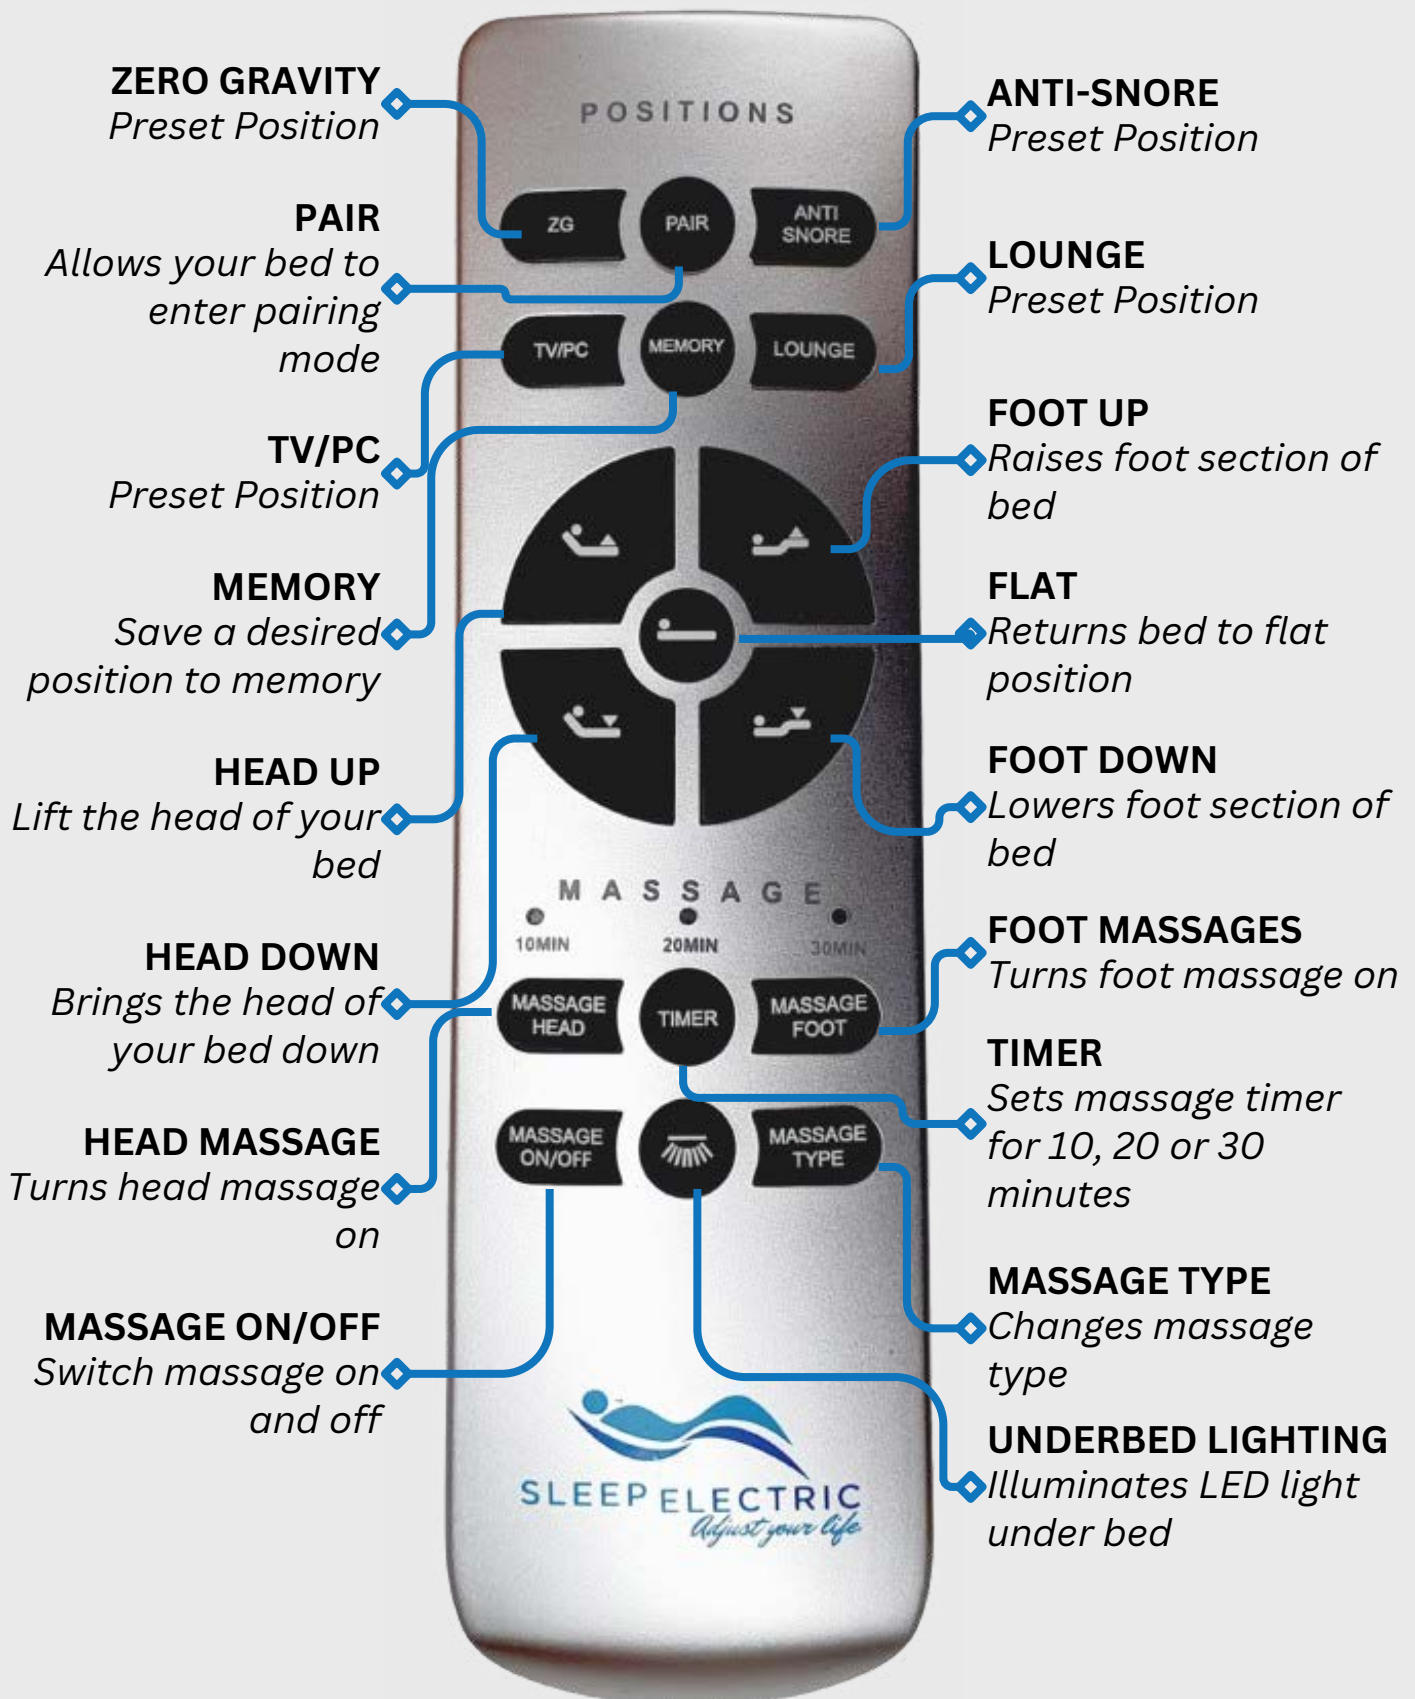

REPROGRAMMING PRE-SETS

9

Steps of Reprogramming Preset Positions

1. Adjust the bed into desired position.
2. Choose the pre-set position that you would like to change (Zero Gravity or TV/PC).
3. Press and hold the **PRE-SET POSITION BUTTON** for 5 seconds, until the backlight begins to flash. The current position of the bed is now saved as a custom position under the selected pre-set button.

Set Up Memory Position

1. Adjust the bed into desired position.
2. Press and hold the **MEMORY BUTTON** for 5 seconds until the backlight begins to flash. The current position of the bed is now saved as a position under the memory button.





SYNCING BEDS

10

To Sync ONE Bed ONLY

1. Insert 2 AAA batteries into the hand control.
2. Connect power to the transformer.
3. Press the **PAIR BUTTON** on the **CONTROL BOX** under the bed, *twice quickly* (the blue pairing light will turn on).
4. Press and hold the **PAIR BUTTON** on the hand control for *3 seconds*. The back light will start flashing. The LED light on the control box will turn green to indicate that pairing is complete. If unsuccessful, repeat the above steps.

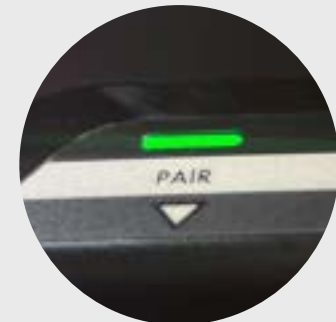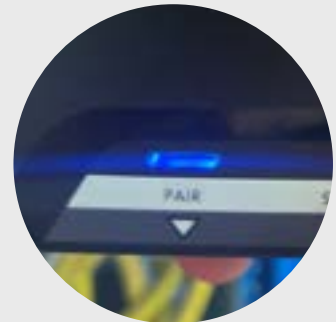

To Sync TWO Beds to ONE Hand Control

Requires Okin Sync Cable (sold separately)

1. Insert Link cable end into each control box on the separate beds you wish to sync.
2. Once completed, either hand control will operate both beds.



TROUBLESHOOTING 11

PROBLEM	SOLUTION
The bed does not respond when the hand control is used	Perform any or all of the following: • Check that the power cord is plugged into a working and grounded electrical outlet • Check that the light on the transformer is on • Check the home's circuit breaker and fuses. • Unplug the power cord from the outlet. After one minute, plug it back in. Press any button on the hand control.
The hand control does not work or light up	Perform any or all of the following: • Check the hand control is still plugged in firmly to the control box under the bed.
Bed stutters while in motion	Perform any or all of the following: • Clear any clutter or obstructions under and around the adjustable bed. Radio frequency interference from other hand controls or electronic devices may affect normal operation. • Ensure the buttons on the hand control are being pressed firmly down when operating the head and foot functions.
USB and/or Underbed Lighting	• Check to see if the cable has been pulled out accidentally from the control box. • For USB, try using alternative devices and/or cables. Please note: Generic cables may not work and you may be required to utilise genuine cables manufactured by your devices company. The USB port is a SLOW charging port and will not support fast charge.

PRODUCT GUARANTEE

12

Avante Australia stands behind the quality and craftsmanship of every product we sell, offering a comprehensive warranty for your peace of mind. Your product guarantee outlines the specific coverage, terms, and care instructions to help you get the most from your purchase. To access a digital copy of your warranty, simply scan the QR code below to download your product guarantee and keep it on hand for future reference.





Phone: 1800 600 600

Email: info@sleepelectric.com.au